




- 1. To be tightened according to Aprilia Tuareg 660 Workshop Manual.
- 2. Do not use Loctite or other thread locking compounds. Use copper grease.
- 3. Assembly sequence:
 - 3.1 Put the handles in place.
 - 3.2 Insert the M3 screws and nut and tighten them to 0.6Nm. Do not overtighten them. See NOTE 1.
 - 3.3 Position the Rear Rack, then insert spacers, washers and screws.
 - 3.4 Tighten the two M8 screw. See NOTE 1.
 - 3.5 Tighten the two M6 screws. See NOTE 1.

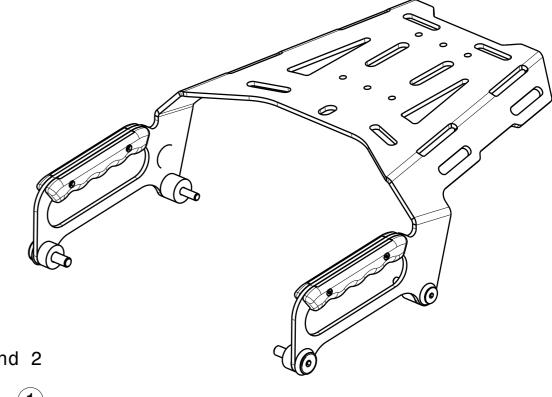



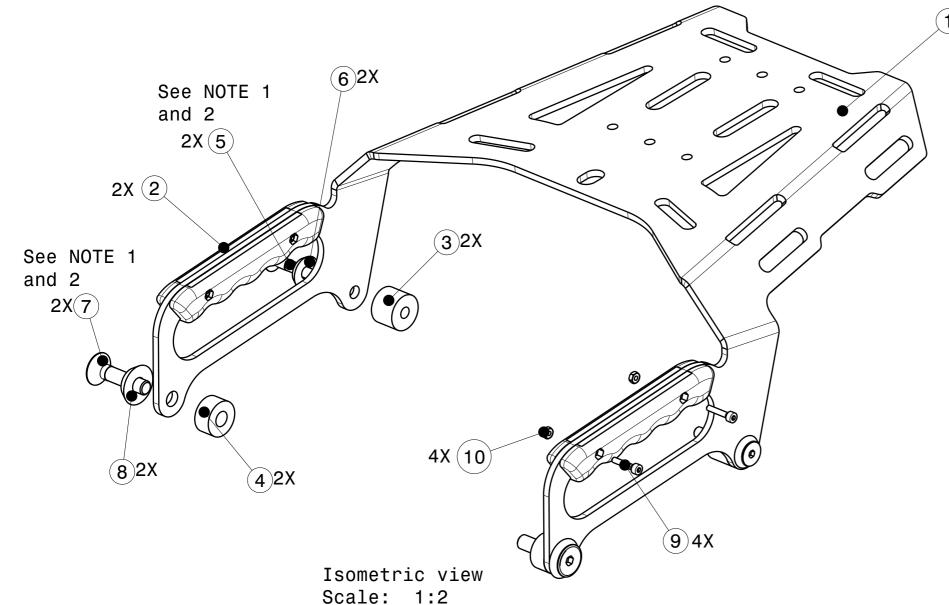

Isometric view Scale: 1:3

PART LIST			
Description	Part Number	F/N	Qty
Rear Rack HD	FGWX-04-B-001	1	1
Handle single	FGWX-04-B-006	2	2
Spacer 6x20x15		3	2
Spacer 8x20x10		4	2
Csk Screw M6x40		5	2
Csk Washer M6		6	2
Csk Screw M8x35		7	2
Csk Washer M8		8	2
Screw M3x16		9	4
Nut M3		10	4

SCALE BREAK ALL EDGES (R AL			.T. 45°) 0.1-0.5		OWODY								
1:1			THREAD TOL. 6g/6H ISO R965/1			GWORX							
		ALL	DIM. INCLU	IDE SURF	FACE TREATI	IENT			•	. • .			
ROUGH Ra μm	-	FILLE RADII	_		DIN			ANG TOL	-		PROJECTION	Q	- •
DATE	-				DESCRI	TION							
DESIGN	GWO	RX			Re	ar	Rac	k F	HD				
DRAWN	GWO	RX			-								
MAT						SURF TREA	T. ATMENT						
SIZE -	DC	OC.NO.	FG	WX	-04	- B			REV.	-	SHEET 1	0F	1